Tuning Pressures with the Manual and Auto Bypass Valves

1) Each chiller has a manual bypass valve and an automatic bypass e-valve to
regulate supply pressure
2) Bypass valve must be tuned such that automatic bypass (steered by PID loop) can
regulate pressure
3) With all e-valves at nominal positions: open bypass valve until pressure gauge
reads approx. 26 psi (up to 27.5 psi with e-valves closed)
4) Check automatic bypass: e-valve should be opened 20-30%
5) Application 1: High pressure problems during chiller startup
a) Sometimes chiller does not start due to over-pressure
b) Pressure to chiller has to be throttled by opening manual bypass until
chiller starts
c) Manual bypass has to be closed back to working point
 6) Application 2: Problem to re-establish ISL flow a) ISL flow (esp. East) keeps tripping on COT face overpressure b) Reduce supply pressure by opening manual bypass valve slightly (a few millimeters), until it falls out of the PID loop. This should facilitate the job of reestablishing flow. c) Carefully close manual bypass valve afterwards until automatic bypass kicks in
Date/Time
Name
Signed